





When putting the firing pin assembly back together:

- Ensure all components of the assembly are clean and dry
- Push the castle washer as far down to the shoulder of the firing pin as possible
- When the castle nut bottoms out on the washer, it is likely that the castles will not be engaged. Do not force the nut further in the clockwise direction, instead turn it back until the next point of engagement.